



The CPR-FE gun comes equipped with both a pressure reduced air cap 23-2101 and a HVLP air cap 23-1301 for areas requiring HVLP compliance.

23-2101 - consumes 11 cfm at 29 psi gun inlet.

23-1301 - consumes 13.5 cfm at 29 psi gun inlet.

23-2101 pressure reduced air caps can be used with the 0.8 mm - 1.7 mm fluid orifices listed below. 23-1301 HVLP air caps can be used with the full range of fluid orifices listed below.

MODEL NO.	AIR CAPS	FLUID TIP RANGE	*MAX GUN INLET PRESS. FOR HVLP	FAN CONTROL	SCFM @ MAX GUN INLET	STANDARD IN CAT PACK	AVAILABLE FLUID NOZZLES TIPS	NEEDLES / marking on needle
CPR-FE	23-2101	0.8 - 1.7	29*	60-1317	11	Included	33-0208 0.8mm (.022")	40-1808 (08)
	CPR						33-0210 1.0mm (.040")	40-1810 (1810)
	(Pressure						33-0212 1.2mm (.046")	40-1812 (1812)
	Reduced)					Included	33-0213 1.3mm (.052")	40-1813 (1813)
	23-1301 (HVLP)	0.8 - 17	29*		13.5		33-0214 1.4mm (.055")	40-1814 (1814)
							33-0215 1.5mm (.059")	40-1815 (1815)
						Included	33-0217 1.7mm (.070")	40-1817 (1817)
Actual fluid nozzle and air cap combinations are determined by application (see application chart page 4)								

HVI P/PRESSURE REDUCED AIR CAP AND FLUID NOZZI E CHART

\*Note: Air cap test gages are available to confirm HVLP compliance.

\*Gun inlet pressures may vary as required by application

Coating Atomization Technologies 337 South Arthur Avenue, Louisville CO 80027 Phone: 888.820.4498, Fax: 303.438.5708 www.spraycat.com

# Operation and Maintenance Instructions for CPR-FE Spray Guns

### Operation

- 1. Connect air supply hose at handle of gun.
- 2. Connect a pressurized fluid supply to the gun fluid inlet.
- 3. Fluid flow can be controlled using the fluid control knob, this restricts flow by limiting needle travel. It is best to control fluid flow by proper selection of fluid orifice size and use the fluid control knob to "fine tune flow rate".
- 4. Fan width can be adjusted using the fan control knob. Turning the knob clockwise narrows the fan.

#### Maintenance

IMPORTANT! Routine cleaning and maintenance is essential to insure proper gun operation.

Several states prohibit spraying solvent into the atmosphere and require the use of covered gun cleaner.

- 1. If a gun cleaner is being used, connect and clean the gun in the gun cleaner according to the manufactures instructions.
- 2. If a gun cleaner is not being used:

Remove air cap and clean separately using clean solvent.

For pressure setups, connect a pressurized solvent supply to the fluid inlet, trigger the gun allowing solvent to flow thru the gun until clean.

## NOTE: Gun head disassembly is not recommended for normal cleaning and maintenance. Not recommended to soak entire spray gun in solvent.

#### Gun head disassembly and reassembly instructions:


Have repair kit # 10-140 available before gun disassembly.


#### Disassembly

- 1. Remove the trigger by removing both screws (19).
- 2. Remove fluid control knob (11).
- 3. Remove needle return spring (13) and needle (12).
- 4. Remove air valve assembly (9) using a 9/16" wrench.
- 5. Using a 7/16" wrench remove the needle seal cartridge (20).
- 6. Using a 13 mm wrench remove the side port control (10) and air control (15).
- 7. Using a 11/16" wrench loosen locknut (18), using a 5/8" wrench remove fluid inlet (17).
- 8. Remove air cap (1), remove fluid tip (2) using a 3/8" socket.
- 9. Using a 1" wrench remove head insert (3).

### Reassembly

- 1. Install a new o-ring (7 and 8) on air valve assembly, lightly lubricate o-rings with vasoline and reinstall air valve (9) into the gun body (6).
- 2. Install a new seal (5) in gun body (6). Install new o-ring (4) on head insert (3). Reinstall head insert into gun body and tighten. Reinstall fluid tip (2) and tighten.
- 3. Install new seal (5) in gun body. Reinstall and tighten fluid inlet (17). Tighten locknut (18) after fluid inlet has been tightened.
- 4. Remove the shipping pin from a new needle seal cartridge (20). Install new needle seal cartridge (20).
- 5. Reinstall side port control (10) and air control (15).
- 6. Reinstall needle (12), needle return spring (13) and fluid control knob (11).
- 7. Reinstall air cap (1).

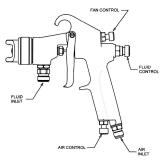

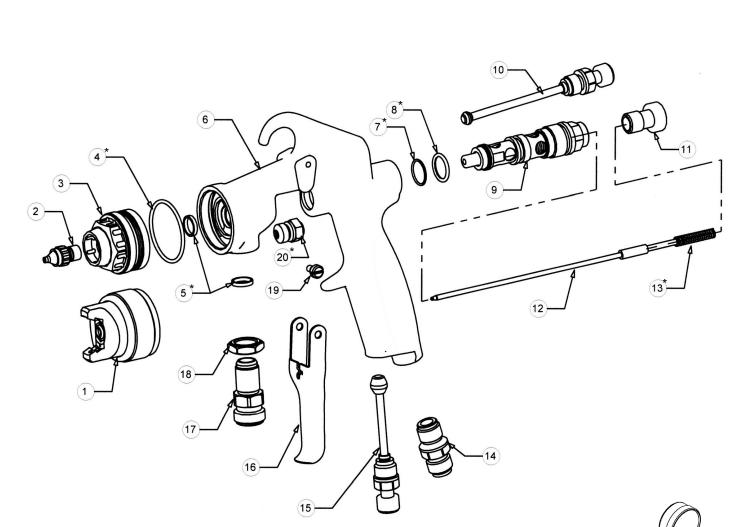



# HVLP AIR CAP TEST GAGES

CPR-FE

23-1301-G

EM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	See Air Cap Chart	Air Cap**	11	60-1312	Fluid Control Knob
2	See Air Cap Chart	Fluid Nozzle Tip**	12	See Air Cap Chart	Fluid Needle**
3	60-35	Head Insert	13	60-211	Needle Return Spring*
4	98-8026	O-Ring*	14	60-104	Air Inlet Fitting
5	60-137	O-Ring*	15	60-1319	Air Control
6	60-1301-CPR	Gun Handle	16	60-2111	Trigger
7	98-5125	O-Ring*	17	60-126	Fluid Inlet
8	98-5225	O-Ring*	18	60-128	Locknut
9	60-1320	Air Valve Assembly	19	60-1315	Trigger Pivot Set (2)
10	60-1317	Side Port Control	20	60-1329	Needle Seal Cartridge*

\*\*See air cap selection chart on page 1

\*Indicates part included in repair kit # 10-140

# FLUID NOZZLE / AIR CAP SELECTION CHARTS

**CPR-FE Series - Pressure Feed Guns** 

## **CPR-FE HVLP/PRESSURE REDUCED SPRAY GUN**

MATERIAL TYPE	FLUID ORIFICE x AIR CAP	MAXIMUM PATTERN WIDTH	CFM
Very Thin			
less than 16 sec. Zahn #2	0.8 mm x 2101 or 1301	23-2101 13"	23-2101 11 CFM
inks , dyes,	1.0 mm x 2101 or 1301	23-1301 12"	23-1301 13.5 CFM
solvents, stains			
Thin			
16 to 20 sec. Zahn #2	1.2 mm x 2101 or 1301	23-2101 13"	23-2101 11 CFM
lacquers, enamels,	1.3 mm x 2101 or 1301	23-1301 12"	23-1301 13.5 CFM
primers, sealers			
Medium			
21 to 30 sec. Zahn #2	1.3 mm x 2101 or 1301		
automotive base coat	1.4 mm x 2101 or 1301	23-2101 13"	23-2101 11 CFM
enamels, primers	1.5 mm x 2101 or 1301	23-1301 12"	23-1301 13.5 CFM
epoxies, urethanes	1.7 mm x 2101 or 1301		
automotive clear coat			
Heavy			
over 30 sec. Zahn #2			
heavy body primers	1.7 mm x 2101 or 1301	23-2101 13"	23-2101 11 CFM
high solid enamels		23-1301 12"	23-1301 13.5 CFM
high solid automotive coatings			
adhesives			



<u>CPR-FE Smart Pack Includes:</u>			
98-0104	3/8" Socket		
98-0112	Ratchet Wrench		
60-8001	Gun Wrench		
98-0113	Gun Cleaning Brush		
Air Caps and	Needles Shown on Page 1		

#### CPR-FE-303R2 Includes:

51-303	1 QT Aluminum Pressure Cup
52-5R2	Pressure Cup Regulator
98-0104	3/8" Socket
98-0112	Ratchet Wrench
60-8001	Gun Wrench
98-0113	Gun Cleaning Brush
Air Caps and	Needles Shown on Page 1

#### CPR-FE-PPSR2 Includes:

91-460	950 mL 3M <sup>™</sup> PPS™ Pressure Cup
91-462	Lids and Liners (Available in 25 Pack)
91-475	#18 PPS Adapter
52-5R2	Pressure Cup Regulator
98-0104	3/8" Socket
98-0112	Ratchet Wrench
60-8001	Gun Wrench
98-0113	Gun Cleaning Brush
Air Caps a	nd Needles Shown on Page 1



<u>CPR-FE</u>



CPR-FE-303R2



CPR-FE-PPSR2