

# PRESSURE FEED SPRAY GUN PRODUCT INFORMATION



The H2O-CPR gun comes equipped with both a pressure reduced air cap 23-2101 and a HVLP air cap 23-1301 for areas requiring HVLP compliance.

23-2101 - consumes 11 cfm at 29 psi gun inlet.

23-1301 - consumes 13.5 cfm at 29 psi gun inlet.

23-2101 compliant air caps can be used with the 0.8 mm - 1.7 mm fluid orifices listed below.

23-1301 HVLP air caps can be used with the full range of fluid orifices listed below.

#### COMPLIANT/HVLP AIR CAP AND FLUID NO77LF CHART

MODEL NO.	AIR CAPS	FLUID TIP RANGE	*MAX GUN INLET PRESS. FOR HVLP	FAN CONTROL	SCFM@ MAX GUN INLET	STANDARD IN CAT	AVAILABLE FLUID NOZZLES TIPS	NEEDLES / marking on needle
NO.						PACK	NOLLES IIFS	
H2O-CPR	23-2101 CPR (Compliant)	0.8 - 1.7	29*	60-1504 (S)	11		33-0208	40-1308 (308)
							33-0210 1.0mm (.040")	40-1310 (310)
							33-0212 1.2mm (.046")	40-1312 (312)
						Included	33-0213 1.3mm (.052")	40-1313 (313)
							33-0214 1.4mm (.055")	40-1314 (314)
	23-1301 (HVLP)	0.8 - 2.2	29*		13.5	Included	33-0215 1.5mm (.059")	40-1315 (315)
						Included	33-0217 1.7mm (.070")	40-1317 (317)
							33-0219 1.9mm (.075")	40-1319 (319)
							33-0222 2.2mm (.086")	40-1322 (322)

Actual fluid nozzle and air cap combinations are determined by application (see application chart page 4)

Coating Atomization Technologies 337 South Arthur Avenue, Louisville CO 80027 Phone: 888.820.4498, Fax: 303.438.5708 www.spraycat.com

<sup>\*</sup>Note: Air cap test gages are available to confirm HVLP compliance.

<sup>\*</sup>Gun inlet pressures may vary as required by application

# Operation and Maintenance Instructions for *H2O-CPR* Spray Guns

### Operation

- 1. Connect air supply hose at handle of gun.
- 2. Connect a pressurized fluid supply to the gun fluid inlet.
- 3. Fluid flow can be controlled using the fluid control knob, this restricts flow by limiting needle travel. It is best to control fluid flow by proper selection of fluid orifice size and use the fluid control knob to "fine tune flow rate".
- 4. Fan width can be adjusted using the fan control knob. Turning the knob clockwise narrows the fan.

#### **Maintenance**

IMPORTANT! Routine cleaning and maintenance is essential to insure proper gun operation.

Several states prohibit spraying solvent into the atmosphere and require the use of covered gun cleaner.

- 1. If a gun cleaner is being used, connect and clean the gun in the gun cleaner according to the manufactures instructions.
- 2. If a gun cleaner is not being used:

Remove air cap and clean separately using clean solvent.

For pressure setups, connect a pressurized solvent supply to the fluid inlet, trigger the gun allowing solvent to flow thru the gun until clean.

NOTE: Gun head disassembly is not recommended for normal cleaning and maintenance.

## Gun head disassembly and reassembly instructions:

Have repair kit # 10-106 available before gun disassembly.


## **Gun head disassembly**

To remove the nozzle carrier (4) and air cap adapter (6):

- 1. Remove the air cap (1), fluid nozzle tip (2), fluid nozzle body (3), and needle (13).
- 2. Remove the needle seal cartridge (23).
- 3. Loosen the locknut (9) and remove fluid inlet (10) using a 5/8" open-end wrench.
- 4. The nozzle carrier (4) and air cap adapter (6) will now slide forward from the gun body (11).

## Gun head reassembly

- 1. Install a new o-ring (5 and 7) on the air cap adapter (6).
- 2. Install the thread locknut (9) onto the fluid inlet (10) as far as possible.
- 3. Install a new fluid inlet seal (8) into the recess area on the nozzle carrier (4) inlet port.
- 4. Slide the nozzle carrier (4) into air cap adapter (6) and insert into the gun body (11) as far as possible. Be sure the nozzle carrier (4) extends into the hole at the back of the gun head. Install the needle seal (23) but do not tighten.
- 5. Rotate the nozzle carrier (4) until the fluid inlet port in the nozzle carrier (4) is aligned with the threaded hole in the body. While in this position, insert the fluid inlet (10) and tighten firmly.
- 6. Tighten the needle seal (23) to approx. 12 ft.-lb. torque.
- 7. Tighten the fluid inlet (10) to approx. 25 ft.-lb. torque.
- 8. Tighten the locknut (9) to approx. 33 ft.-lb. torque.

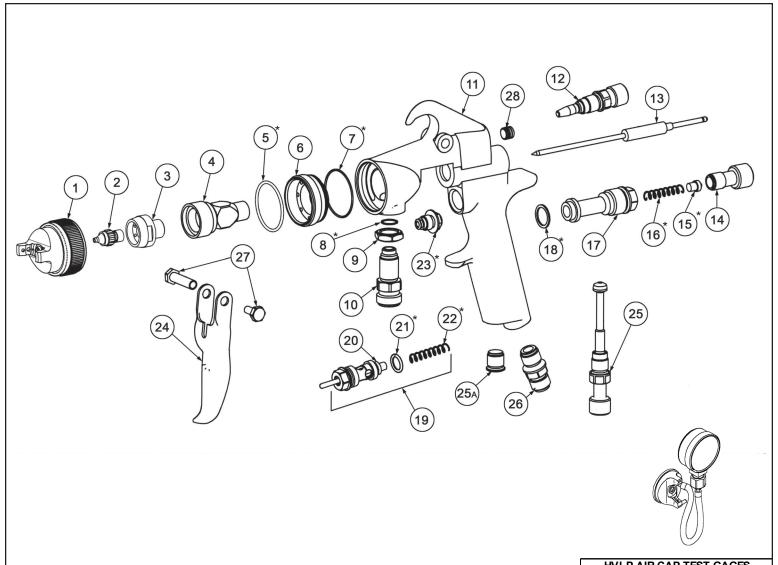

HVLP AIR CAP TEST GAGES							
FOR H2O-CPR	23-1301-G						

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	See Air Cap Chart	Air Cap**	16	60-204	Needle Return Spring*
2	See Air Cap Chart	Fluid Nozzle Tip**	17	60-201	Rear Bushing
3	33-1202	Fluid Nozzle Body	18	60-119	Seal*
4	60-L31H	Nozzle Carrier	19	60-1520	Air Valve Assembly
5	98-8026	O-Ring*	20	60-302	Air Valve Poppet
6	60-34H	Air Cap Adapter	21	60-125	O-Ring*
7	60-131	O-Ring*	22	61-1003	Air Valve Spring*
8	60-124	Fluid Inlet Seal*	23	60-1400	Needle Seal Cartridge*
9	60-128	Locknut	24	60-2101	Trigger
10	60-126	Fluid Inlet Fitting	25	60-1510	Air Control
11	60-1120-CPR-H2O	CPR Gun Body HVLP	25A	60-122	Plug (optional)
12	See Air Cap Chart	Fan Control Assembly**	26	60-104	Air Inlet Fitting
13	See Air Cap Chart	Fluid Needle**	27	60-1033	Trigger Pivot Set
14	60-202	Fluid Control Knob	28	98-0109	Allen Plug
15	60-205	Spring Seat*		•	

<sup>\*\*</sup>See air cap selection chart on page 1

<sup>\*</sup>Indicates part included in repair kit # 10-106

## FLUID NOZZLE / AIR CAP SELECTION CHARTS

## **H2O-CPR Series - Pressure Feed Guns**

## H2O-CPR HVLP/COMPLIANT SPRAY GUN

MATERIAL TYPE	FLUID ORIFICE X AIR CAP	MAXIMUM PATTERN WIDTH	CFM
Very Thin			
less than 16 sec. Zahn #2	0.8 mm x 2101 or 1301	23-2101 13"	23-2101 11 CFM
inks, dyes,	1.0 mm x 2101 or 1301	23-1301 12"	23-1301 13.5 CFM
solvents, stains			
Thin			
16 to 20 sec. Zahn #2	1.2 mm x 2101 or 1301	23-2101 13"	23-2101 11 CFM
lacquers, enamels,	1.3 mm x 2101 or 1301	23-1301 12"	23-1301 13.5 CFM
primers, sealers			
Medium			
21 to 30 sec. Zahn #2	1.3 mm x 2101 or 1301		
automotive base coat	1.4 mm x 2101 or 1301	23-2101 13"	23-2101 11 CFM
enamels, primers	1.5 mm x 2101 or 1301	23-1301 12"	23-1301 13.5 CFM
epoxies, urethanes	1.7 mm x 2101 or 1301		
automotive clear coat			
Heavy			
over 30 sec. Zahn #2	1.7 mm x 2101 or 1301	23-2101 13" 23-1301 12"	23-2101 11 CFM 23-1301 13.5 CFM
heavy body primers	1.9 mm x 1301		
high solid enamels	2.2 mm x 1301		
high solid automotive coatings	2.2 11111 X 1301		
adhesives			



### H2O-CPR

### **H2O-CPR Smart Pack Includes:**

98-0104 3/8" Socket

98-0112 Ratchet Wrench

60-8001 Gun Wrench

98-0113 Gun Cleaning Brush

Air Caps and Needles Shown on Page 1



H2O-CPR-303SS-R2



H2O-CPR-PPS-R2

#### H2O-CPR-303SS-R2 Includes:

51-303SS 1 QT Stainless Steel Pressure Cup

52-5R2 Pressure Cup Regulator

98-0104 3/8" Socket

98-0112 Ratchet Wrench

60-8001 Gun Wrench

98-0113 Gun Cleaning Brush

Air Caps and Needles Shown on Page 1

### **H2O-CPR-PPS-R2 Includes:**

91-460 950 mL 3M™ PPS™ Pressure Cup

91-462 Lids and Liners (Available in 25 Pack)

91-475 #18 PPS Adapter

52-5R2 Pressure Cup Regulator

98-0104 3/8" Socket

98-0112 Ratchet Wrench

60-8001 Gun Wrench

98-0113 Gun Cleaning Brush

Air Caps and Needles Shown on Page 1

Revised 3/18/14