



CONVENTIONAL AIR CAP AND FLUID NOZZLE CHART

MODEL NO.	AIR CAPS	PRESS. OR SIPHON	*RECOM. GUN INLET PRESS.	FAN CONTROL	SCFM @ MAX GUN INLET	AIR CAP RING	STANDARD IN CAT PACK	AVAILABLE FLUID NOZZLES TIPS	NEEDLES / marking on needle
LYNX 300C (L300C)	23-2010*	press/siph	45-55	60-1500	9-10.7	23-0201	Included	33-0608 0.8mm (.022")	40-1308C (308)
		press/siph						33-0610 1.0mm (.040")	40-1310C (310)
	23-2013*	press/siph					Included	33-0613 1.3mm (.052")	40-1313C (313)
	23-2014*	press/siph						33-0614 1.4mm (.055")	40-1314C (314)
	23-2016*	press/siph				Included	33-0616 1.6mm (.063")	40-1315C (315)	

Actual fluid nozzle and air cap combinations are determined by application (see application chart page 4)

*Gun inlet pressures may vary as required by application

Operation and Maintenance Instructions for *L3000* Spray Guns

Operation

1. Connect air supply hose at handle of gun.
2. Connect a pressurized fluid supply or paint siphon cup to the gun fluid inlet.
3. Fluid flow can be controlled using the fluid control knob, this restricts flow by limiting needle travel. It is best to control fluid flow by proper selection of fluid orifice size and use the fluid control knob to "fine tune flow rate".
4. Fan width can be adjusted using the fan control knob. Turning the knob clockwise narrows the fan.

Maintenance

IMPORTANT! Routine cleaning and maintenance is essential to insure proper gun operation.

Several states prohibit spraying solvent into the atmosphere and require the use of covered gun cleaner.

1. If a gun cleaner is being used, connect and clean the gun in the gun cleaner according to the manufactures instructions.
2. If a gun cleaner is not being used:
Remove air cap and clean separately using clean solvent.
For pressure setups, connect a pressurized solvent supply to the fluid inlet, trigger the gun allowing solvent to flow thru the gun until clean.
For siphon setups, first clean the siphon cup thoroughly then spray clean solvent thru the gun until clean.

NOTE: Gun head disassembly is not recommended for normal cleaning and maintenance.

Gun head disassembly and reassembly instructions:

Have repair kit # 10-106 available before gun disassembly.


Gun head disassembly

To remove the nozzle carrier (5) and air cap adapter (7):

1. Remove the air cap (2), fluid nozzle tip (3), fluid nozzle body (4), and needle (14).
2. Remove the needle seal cartridge (24).
3. Loosen the locknut (10) and remove fluid inlet (11) using a 5/8" open-end wrench.
4. The nozzle carrier (5) and air cap adapter (7) will now slide forward from the gun body (12).

Gun head reassembly

1. Install a new o-ring (8) on the air cap adapter (7).
2. Install the thread locknut (10) onto the fluid inlet (11) as far as possible.
3. Install a new fluid inlet seal (9) into the recess area on the nozzle carrier (5) inlet port.
4. Slide the nozzle carrier (5) into air cap adapter (7) and insert into the gun body (12) as far as possible. Be sure the nozzle carrier (5) extends into the hole at the back of the gun head. Install the needle seal (24) but do not tighten.
5. Rotate the nozzle carrier (5) until the fluid inlet port in the nozzle carrier (5) is aligned with the threaded hole in the body. While in this position, insert the fluid inlet (11) and tighten firmly.
6. Tighten the needle seal (24) to approx. 12 ft.-lb. torque.
7. Tighten the fluid inlet (11) to approx. 25 ft.-lb. torque.
8. Tighten the locknut (10) to approx. 33 ft.-lb. torque.

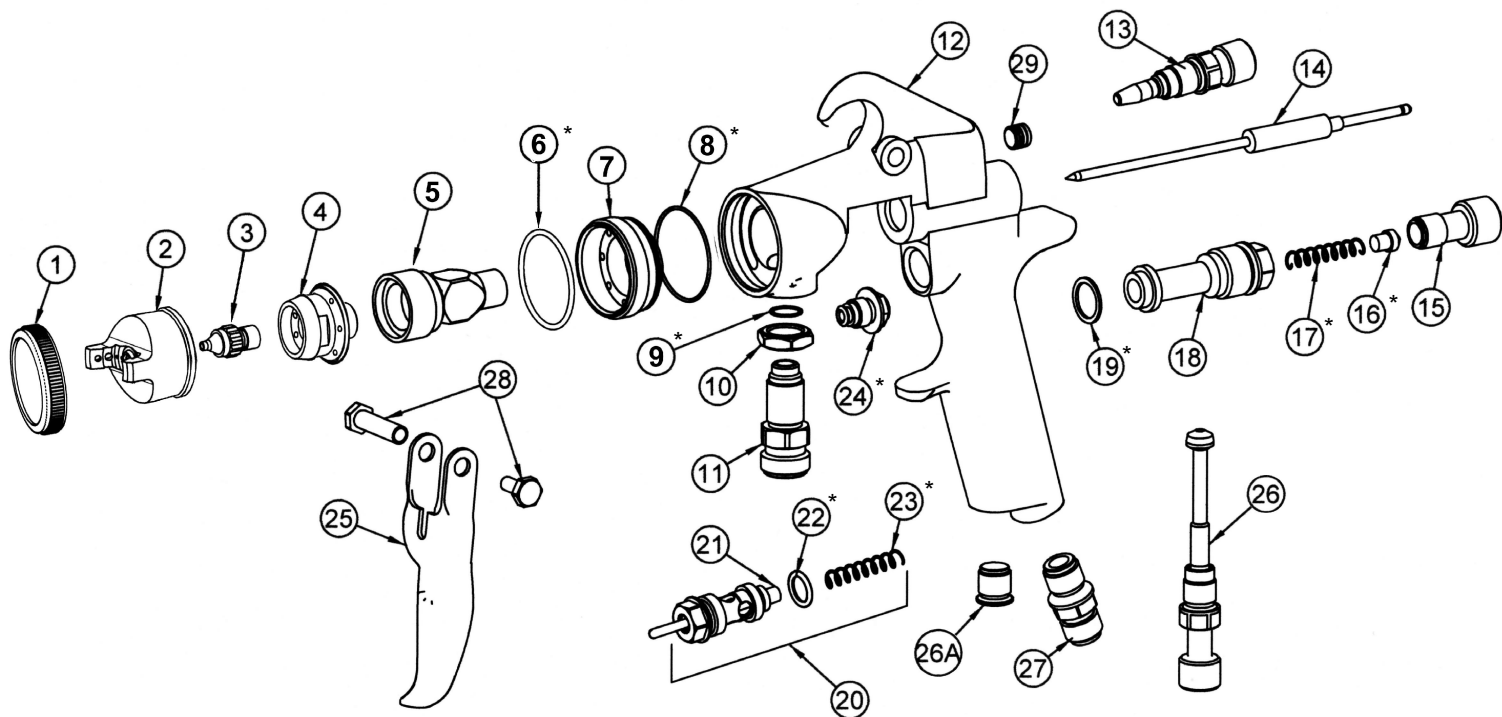

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	See Air Cap Chart	Air Cap Retaining Ring**	16	60-205	Spring Seat*
2	See Air Cap Chart	Air Cap**	17	60-204	Needle Return Spring*
3	See Air Cap Chart	Fluid Nozzle Tip**	18	60-201	Rear Bushing
4	33-2201	Fluid Nozzle Body	19	60-119	Seal*
5	60-L31C	Nozzle Carrier	20	60-1520	Air Valve Assembly
6	98-8024	Gasket*	21	60-302	Air Valve Poppet
7	60-32C	Air Cap Adapter	22	60-125	O-Ring*
8	60-131	O-Ring*	23	61-1003	Air Valve Spring*
9	60-124	Fluid Inlet Seal*	24	60-1400	Needle Seal Cartridge*
10	60-128	Locknut	25	60-2101	Trigger
11	60-126	Fluid Inlet Fitting	26	60-1510	Air Control
12	60-1124	Lynx Gun Body Conventional	26A	60-122	Plug (optional)
13	See Air Cap Chart	Fan Control Assembly**	27	60-104	Air Inlet Fitting
14	See Air Cap Chart	Fluid Needle**	28	60-1033	Trigger Pivot Set
15	60-202	Fluid Control Knob	29	98-0109	Allen Plug

**See air cap selection chart on page 1

*Indicates part included in repair kit # 10-106

FLUID NOZZLE / AIR CAP SELECTION CHARTS

LYNX Series 300C - Pressure / Siphon Feed Guns

L300C CONVENTIONAL SPRAY GUN

MATERIAL TYPE	FLUID ORIFICE x AIR CAP	MAXIMUM PATTERN WIDTH	PRESS. / SIPHON
Very Thin less than 16 sec. Zahn #2 inks , dyes, solvents, stains	0.8 mm x 2010	12	P/S
	1.0 mm x 2010	12	P/S
Thin 16 to 20 sec. Zahn #2 lacquers, enamels, primers, sealers	0.8 mm x 2010	12	P/S
	1.0 mm x 2010	12	P/S
	1.3 mm x 2013	12	P/S
Medium 21 to 30 sec. Zahn #2 automotive base coat enamels, primers epoxies, urethanes automotive clear coat	1.3 mm x 2013	12	P/S
	1.4 mm x 2014	12	P/S
	1.6 mm x 2016	12	P/S
Heavy over 30 sec. Zahn #2 heavy body primers high solid enamels high solid automotive coatings adhesives	1.4 mm x 2014	12	P/S
	1.6 mm x 2016	12	P/S

CP-L300C Smart Pack Includes:

98-0104 3/8" Socket
98-0112 Ratchet Wrench
60-8001 Gun Wrench
98-0113 Gun Cleaning Brush
Air Caps and Needles Shown on Page 1

CP-L300C-303R2 Includes:

51-303 1 QT Aluminum Pressure Cup
52-5R2 Pressure Cup Regulator
98-0104 3/8" Socket
98-0112 Ratchet Wrench
60-8001 Gun Wrench
98-0113 Gun Cleaning Brush
Air Caps and Needles Shown on Page 1

CP-L300C-PPSR2 Includes:

91-460 950 mL 3M™ PPS™ Pressure Cup
91-462 Lids and Liners (Available in 25 Pack)
91-475 #18 PPS Adapter
52-5R2 Pressure Cup Regulator
98-0104 3/8" Socket
98-0112 Ratchet Wrench
60-8001 Gun Wrench
98-0113 Gun Cleaning Brush
Air Caps and Needles Shown on Page 1



CP-L300C



CP-L300C-303R2



CP-L300C-PPSR2